

PULSE FLEX



Quick Setup Guide

bluesound.com

Included Accessories



120V AC Power Cord or



230V AC Power Cord



 
Mini Jack to Toslink Adaptor

PULSE FLEX All-in-one Portable Wireless Streaming Music System

English	4
Français	8
Español	9
Italiano	10
Português	11
Deutsch	12
Nederlands	13
Svenska	14
Русский	15

1

CONNECT TO POWER

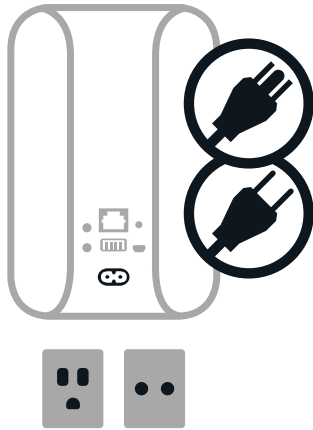


- A Select the AC Power Cord appropriate for your region and plug it into the Player, and then into your wall outlet.
- B The PULSE FLEX's LED button should turn Solid Green, indicating that the Player is in Hotspot Mode and ready to be added to your home WiFi network.

*Never force a power cord into a wall outlet.
An adaptor may be necessary in certain regions.*

2

 CONNECT TO WiFi

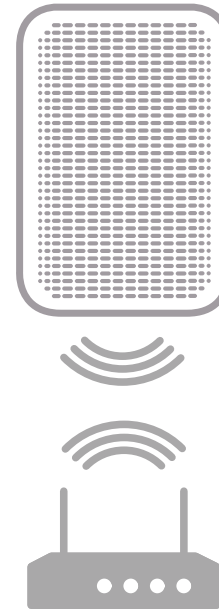


- A On your tablet or smartphone, **look for the WiFi network (hotspot) matching your PULSE FLEX's unique network ID**, and join it. The network ID is listed as the product name (i.e. PULSE FLEX) immediately followed by the last four digits in the MAC (Machine Access Control) address (example: **PULSEFLEX-001A**). The full 12-digit MAC address is printed on a sticker on the back panel of your Player.
- B Open a web browser on your tablet or smartphone and enter **setup.bluesound.com**, and press "Go". A control panel page should then appear.
- C From the main menu displayed, select **Configure WiFi**.
- D Select **your home WiFi Network** from the **Configure Wireless** drop down menu.
- E Enter your home network's **Wireless Password** in the field provided (if it is a protected network).
- F Select a **Room Name** from the drop down list, or create a customized room name in the field provided.
- G Press **Update** and wait for the Player's light to turn solid blue, indicating that the Player has successfully joined your home WiFi network.
- H Repeat steps A-G for each additional Bluesound Player.
- I **Reselect your home WiFi network** from your tablet or smartphone's **main network settings**.

Alternatively, the PULSE FLEX can be connected directly to your wired home network or router using an Ethernet cable (not provided).

To see an instructional video on WiFi Setup, please visit www.bluesound.com

3

 DOWNLOAD THE APP

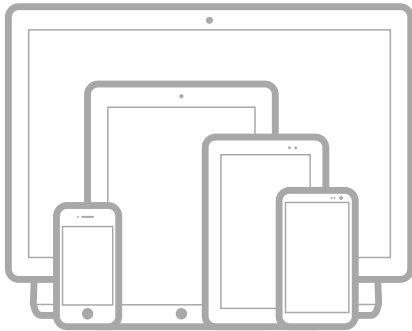

All Bluesound Controller Apps for Apple iOS devices (iPhone, iPad, iPod), Android devices, Kindle Fire, and Windows or Mac desktops are available for download at www.bluesound.com/downloads

Congratulations, your Player setup is complete!


It's time to connect your music. Launch the App for the following playback options.



4

CONNECT TO MUSIC



Your Music : To play music stored on a computer or NAS device, open the Navigation Drawer by tapping  in the App, choose **Configure Player** from the menu, and select **Configure Network Shares**. Follow the screen prompts, and open every Room in your home to your entire digital music library.



Internet Radio : Simply select **TuneIn** from the **Music Services** menu, and find your favorite radio station. Or, explore and discover the thousands of radio stations streaming live 24/7 from anywhere on the planet via **TuneIn**.

For detailed information, please visit www.bluesound.com

BLUESOUND®

© Bluesound International. Bluesound, the stylized wordmark and "B" logotype, the phrase "HiFi for a wireless generation", PULSE FLEX and all other Bluesound product names and taglines are trademarks or registered trademarks of Bluesound International, a division of Lenbrook Industries Limited. All other logos and services are trademarks or service marks of their respective owners.

15-003

PULSE FLEX

All-in-one Portable
Wireless Streaming
Music System

Owner's Manual

Welcome to Bluesound, Hi-Fi for the Wi-Fi generation.

Bluesound transforms your local digital music library by putting the music of your life right at your fingertips. The clutter of CDs is relegated to a previous era! Your smartphone, desktop or tablet running the Bluesound App now controls your music.

Your Bluesound music system is also a sophisticated Internet streaming device that allows you to listen to a wide range of Internet music service providers. Bluesound also provides access to music subscription services featuring extensive catalogs of millions of songs streamed to you over the internet in real time. TuneIn Radio makes every radio station in the world a local station via the magic of the internet.

To take full advantage of all these Bluesound capabilities requires a robust wired or wireless home network and a reliable high speed Internet connection, provided by a DSL or Cable modem. Internet access must be contracted and installed by your local Internet Service Provider. For remote areas there are satellite options for high speed internet access.

Before signing on to a music subscription or cloud service we suggest that you review your Internet service plan and be sure you have enough internet speed and bandwidth to provide uninterrupted streaming. Most internet service providers offer multiple plans and can help you make the best choice.

For detailed instructions on how to control your Bluesound player, visit our website at : www.bluesound.com.

Included Accessories



 
120V AC Power Cord



230V AC Power Cord



Mini Jack to Toslink Adaptor

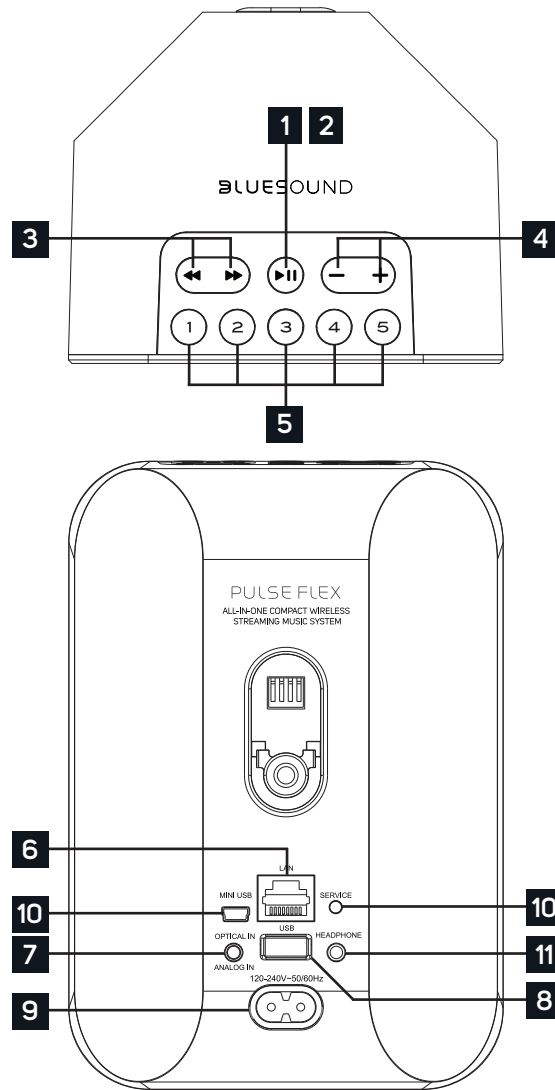

1 STATUS INDICATOR

Below is a table of the LED blink codes and their corresponding descriptions.

LED BLINK CODE	DESCRIPTION
Short blue flash, then red	Powering up, rebooting the unit
Solid green	Hotspot Mode
Flashing green	Connecting to Network shares
Solid red	Cannot boot; drive error
Red pulse	No internet gateway
White pulse	Software update available
Solid red	Upgrade mode
Alternate flashing red and green	Upgrading...
Flashing blue	Mute mode
Solid white	Indexing
Solid blue	Connected to Network – ready to use with Bluesound App
Flashing red	Factory reset in progress

- 2 LED/MUTE BUTTON :** This button has multiple functions - an indicator of network connectivity and a MUTE button. For a full listing of LED Blink Codes, please see #1 – Blink Codes. Press to temporarily mute audio output. Press again to restore audio from mute mode. When MUTE mode is selected the LED indicator will flash blue.
- 3 PREVIOUS TRACK/NEXT TRACK :** These buttons can be used to go back to the previous track ◀◀ or skip to the next track ▶▶ in your current playlist.
- 4 +, - (VOLUME) :** Toggle either button to vary volume level. Volume level will not change if you press and hold either button.
(+) : Increase volume level
(-) : Decrease volume level
- 5 PRESETS:** The PULSE FLEX has 5 programmable preset buttons. These presets are configured using the Configure Player Menu in the Bluesound App.
- 6 LAN PORT :** The LAN PORT connection can be used with the Ethernet cable provided. This is an optional connection since the PULSE FLEX can be connected to the network through a Wi-Fi connection to your router. To setup the PULSE FLEX using the LAN Port a Wired Ethernet connection is required. Using the Ethernet cable provided, connect one end of the Ethernet cable to the LAN port of your wired Ethernet broadband router and the other end to the PULSE FLEX's LAN port.
- 7 OPTICAL IN/ANALOG IN :** Using a 3.5mm Stereo Audio Cable (not provided), connect one end to the Analog In of the PULSE FLEX and the other end to the corresponding analog output of other compatible devices. The source will show as an Analog Input in the Navigation Drawer of the Bluesound app. Using an Optical to 3.5mm convertor (included with the PULSE FLEX), a digital optical source can also be added. This will appear as Optical Input in the Navigation Drawer.
- 8 USB (TYPE A) :** Connect a USB mass storage device to the USB input. Typical USB mass storage devices compatible with the PULSE FLEX include portable flash memory devices and external hard drives (FAT32 formatted).
- 9 AC MAINS INPUT :** The PULSE FLEX comes supplied with two separate AC power cords. Select the AC power cord appropriate for your region. Before connecting the plug to the wall outlet, connect firmly the other end of the AC power cord to PULSE FLEX's AC Mains input socket. Never force the plug into a wall outlet. An adaptor may be necessary in certain regions. Always disconnect the plug from the wall outlet first, before disconnecting the cable from the PULSE FLEX's AC Mains input socket.
- 10 SERVICE :** Use the SERVICE port in conjunction with USB (Type B Mini) to initially load firmware on the Player. This is not for consumer use. Only Authorized Bluesound Service personnel can access this USB port and SERVICE control button.
- 11 HEADPHONE JACK :** A 3.5mm headphone jack is located on the back of the PULSE FLEX.

WARNING!

THIS IS A FACTORY RESET OF YOUR PLAYER. ALL CUSTOMIZATION INCLUDING WI-FI NETWORK CONFIGURATION, FILE SHARES AND SAVED PLAYLISTS WILL BE LOST. YOU WILL HAVE TO RE-CREATE THESE ONCE COMPLETE. THIS PROCESS IS ONLY RECOMMENDED IF YOUR PLAYER IS NOT FUNCTIONING AND AN INTERNET FIRMWARE UPGRADE HAS FAILED. FOR ANY QUESTIONS OR CONCERNS CONTACT AN AUTHORIZED BLUESOUND CUSTOMER REPRESENTATIVE BEFORE PROCEEDING!

Steps to Factory Reset:

1. Disconnect the player from electrical power.
2. Wait 10 seconds
3. Reconnect the power
4. The LED will flash Blue – once you see it turn Red, touch and hold the LED Mute Icon (It will immediately turn Green and then back to Red) - do not let go of the LED.
5. Once the LED turns back to Red, continue to hold the button for 30 seconds.
6. After 30 seconds, the LED will begin to blink red – then release the button.

All customization to the Bluesound player will be removed and restored to factory settings.

IMPORTANT: Removing your finger from the LED at any time before the LED begins flashing red will cancel the factory reset and leave the player in Upgrade Mode. Just start the steps again to factory reset the player.


You will know the factory reset is successful if the player returns to Hotspot mode (wireless connection - the LED will turn solid green). If the player is connected to your network through a wired Ethernet connection, it will simply connect as if it was a new player (LED will turn solid blue).

BLUESOUND®

 
© Bluesound International. Bluesound, the stylized wordmark and "B" logotype, the phrase "HiFi for a wireless generation", PULSE FLEX and all other Bluesound product names and taglines are trademarks or registered trademarks of Bluesound International, a division of Lenbrook Industries Limited. All other logos and services are trademarks or service marks of their respective owners.

How to use Connect

You'll need Spotify Premium to use Connect, see details overleaf.

- 1 Add your new device to the same wifi network as your phone, tablet or PC (see product user instructions for details).
- 2 Open the Spotify app on your phone, tablet or PC, and play any song.
- 3 If you're using the app on a phone - tap the song image in the bottom left of the screen. For tablet and PC move to step 4.
- 4 Tap the Connect icon 
- 5 Pick your device from the list. If you can't see it, just check it's connected to the same wifi network as your phone, tablet or PC.

All done! Happy listening.



Say hello to Spotify Premium

Spotify Premium lets you listen to millions of songs ad-free – the artists you love, the latest hits and discoveries just for you. Simply hit play to hear any song you like, at the highest sound quality.

Check out our current Premium offers at spotify.com/premium

Your new device has Spotify Connect built in.

Spotify Connect lets you control the music playing on your device, using the Spotify app on your mobile, tablet or PC.

Listening is seamless. You can take calls, play games, even switch your phone off – all without interrupting the music.

Learn more at spotify.com/connect





BRING
MUSIC
BACK TO
LIFE

HDtracks[®]

Experience **#LivingHiFi** in hi-res.
Get **15%** off your first order on
Bluesound with code: BLUESOUNDHD15

* Expires December 31ST, 2015. Territory restrictions may apply.
One use of code per customer.

HDtracks[®]

The World's Greatest Sounding Music Downloads.

Place your order at hdtracks.com / hdtracks.co.uk / hdtracks.de

BLUESOUND®

IMPORTANT – PLEASE READ THE TERMS OF THIS LICENSE AGREEMENT CAREFULLY BEFORE USING YOUR BLUESOUND PRODUCT OR DOWNLOADING ANY SOFTWARE OR SOFTWARE UPDATE. BY USING YOUR BLUESOUND PRODUCT, OR DOWNLOADING ANY SOFTWARE, FIRMWARE OR DOCUMENTATION YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS LICENSE AGREEMENT, YOU MAY RETURN THE BLUESOUND PRODUCT WITHIN 30 DAYS OF PURCHASE TO THE RETAIL LOCATION WHERE YOU PURCHASED IT, TOGETHER WITH THE ORIGINAL RECEIPT AND ALL PACKAGING, FOR A REFUND.

License

Bluesound International, a division of Lenbrook Industries Limited (“Bluesound”), furnishes this Bluesound Software [defined to include the software embedded in your Bluesound product (as updated from time to time) and any desktop or handheld application portions of the software] and accompanying documentation, and licenses their use to you as provided in this Agreement.

Under this Agreement, Bluesound grants you a non-exclusive, non-transferable, non-sublicenseable, royalty-free limited license to use the Bluesound Software for the purpose of operating your Bluesound product and the related desktop or handheld device applications on any personal computer or handheld device owned or controlled by you. Except as described above, you may not transfer the Bluesound Software to any other computing device or remove the Bluesound Software from your Bluesound product. Notwithstanding any license granted herein by Bluesound, you acknowledge and agree that it is your sole responsibility to comply with U.S. and International copyright laws with respect to your use of the Software.

You agree not to modify, adapt, translate, reverse engineer, decompile, or disassemble the Bluesound Software, in whole or in part, except as expressly provided for in this agreement or upon Bluesound’s written request. In addition, you agree not to transfer or disclose the Bluesound Software, the accompanying online documentation or any program you develop from them in whole or in part, to any third party except upon Bluesound’s prior written approval. Finally, you agree not to use Bluesound product in whole or in part for any purpose other than as outlined in the online documentation.

Except for the limited license granted herein, Bluesound and its suppliers hereby retain all right, title and interest in and to all worldwide intellectual property rights embodied in the Bluesound Software. All other rights are reserved by Bluesound.

Termination

The license is effective until terminated. Your rights under this License will terminate automatically or otherwise cease to be effective, without notice from Bluesound, if you fail to comply with any terms of this License. Upon termination of this License you will cease all use of the Bluesound Software, and you will destroy the Bluesound Software and accompanying documentation and all copies you have made of them. In addition, upon termination you will have no recourse against Bluesound for your inability to use the program or accompanying documentation.

Compliance With Copyright Laws

You acknowledge that Bluesound owns all right, title and interest, in all copyrights, trade secrets, and intellectual property related to your Bluesound product, the Bluesound Software and accompanying documentation.

Bluesound complies with U.S. and international copyright laws and in consideration of the license granted herein, you agree to do the same. You acknowledge that unauthorized copying or distribution of music or other content accessed using your Bluesound product is prohibited by such copyright laws, and you agree that you will not, directly or indirectly, copy or distribute any content without the express written authorization of the copyright holder. You agree to indemnify and hold harmless Bluesound and its licensors from and against any and all claims, suits, losses, damages, liabilities, costs and expenses incurred by Bluesound or its licensors arising out of or related to your failure to comply with the terms of this section.

Third Party Content and Technologies Support

From time to time, Bluesound may provide access to third party content providers via the Bluesound Product. In addition, Bluesound may support certain third party technologies, such as specific file formats. Bluesound reserves the right to discontinue access to and/or support for such third party content or technologies at any time, and for any reason. Bluesound makes no representations or warranties whatsoever regarding the selection of, or continuing support for, any such third party content or technologies.

Access to services provided by third parties requires Internet access and may require you to accept additional terms. You agree that Bluesound is not responsible for evaluating or examining any such third party services, technologies or related materials and that Bluesound will not have any liability to you, related to such services, technologies or related materials.

Disclaimer of Warranties

You acknowledge and agree that to the maximum extent permitted by law:

- _ The Bluesound Software and services performed by the Bluesound Software are provided "As Is" with all faults and without warranty of any kind. Bluesound does not warrant against interference with your enjoyment of the Bluesound Software, that the Bluesound Software and related services will meet your requirements or that the Bluesound Software and related services will be uninterrupted or error free.
- _ Bluesound does not warrant that any defects in the Bluesound Software will be corrected or that the Bluesound Software will be compatible or work with any third party software, applications or third party services.
- _ The Bluesound Software and related services are at your risk and the entire risk as to satisfactory quality, performance, accuracy and effort is yours.

Limitation of Liability

To the extent not prohibited by law, in no event will Bluesound or its suppliers be liable for personal injury or any damages whatsoever, including but not limited to, incidental, special, consequential, exemplary, or indirect damages, and including but not limited to, cost of cover, loss of data, loss of profits, business interruption, loss of business information, or other pecuniary loss arising from the use of (or inability to use) the product, no matter how caused and on any theory of liability. Because some jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, some of the above limitations may not apply to you, but they shall apply to the maximum extent permitted by law. In no event shall Bluesound's total liability to you for all damages in any one or more causes of action exceed the lesser of the amount paid by you for your Bluesound product and US\$500. The limitations outlined here will apply even if Bluesound, its suppliers or dealers have been advised of the possibility of such damage or of any type of use intended by you. These limitations shall apply notwithstanding the failure of essential purpose of any limited remedy. You acknowledge that these limitations reflect a reasonable allocation of risk.

Bluesound Privacy Policy

The Bluesound Privacy Policy which can be found at www.bluesound.com/privacy-policy outlines the type of information that may be collected from you by Bluesound and how such information may be used by Bluesound.

Controlling Law and Severability

This License will be governed by and construed in accordance with the laws of the Province of Ontario. This license shall not be governed by the United Nations Conventions on Contracts for the International Sale of Goods, the application of which is expressly excluded. If for any reason a court of competent jurisdiction finds any provision, or portion thereof, to be unenforceable, the remainder of the license shall remain in full force and effect.

Important Safety Instructions

Save these instructions for later use.

Follow all warnings and instructions marked on the audio equipment.

- _ **Read instructions** - All the safety and operating instructions should be read before the product is operated.
- _ **Retain instructions** - The safety and operating instructions should be retained for future reference.
- _ **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- _ **Follow Instructions** - All operating and use instructions should be followed.
- _ **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- _ **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- _ **Water and Moisture** - Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- _ **Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.



A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

- _ **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- _ **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

The primary method of isolating the amplifier from the mains supply is to disconnect the mains plug. Ensure that the mains plug remains accessible at all times. Unplug the AC power cord from the AC outlet if the unit will not be used for several months or more.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

- _ **Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

- _ **Power Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- _ **Outdoor Antenna Grounding** - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- _ **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.
- _ **Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- _ **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- _ **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

Warning

The apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.

- _ **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - _ When the power supply cord or plug is damaged.
 - _ If liquid has been spilled, or objects have fallen into the product.
 - _ If the product has been exposed to rain or water.
 - _ If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - _ If the product has been dropped or damaged in any way.
 - _ When the product exhibits a distinct change in performance-this indicates a need for service.
- _ **Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- _ **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

_ **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Warning

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

Caution

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

RESPONSIBLE PARTY

Lenbrook Industries Limited, 633 Granite Court, Pickering, Ontario L1W 3K1

Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- _ Reorient or relocate the receiving antenna.
- _ Increase the separation between the equipment and receiver.
- _ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- _ Consult the dealer or an experienced radio/ TV technician for help.

CAN ICS-3 (B)/NMB-3(B)

This device complies with Industry Canada license-exempt RSS-210. Operation is subject to the following two conditions: (1) this device may not cause Interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

- _ no naked flame sources such as lighted candles should be placed on the apparatus;
- _ the use of apparatus in tropical climate

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- _ This device may not cause harmful interference, and
- _ This device must accept any interference received, including interference that may cause undesired operation.

Caution regarding placement

To maintain proper ventilation, be sure to leave a space around the unit (from the largest outer dimensions including projections) that is equal to or greater than shown below.

- _ Left and Right Panels: 10 cm
- _ Rear Panel: 10 cm
- _ Top Panel: 10 cm

Applies only to Pulse 2 and Pulse Mini

Caution

Marking and rating plate are located at the bottom enclosure of the apparatus.



WARNING - IF THIS PRODUCT IS USED AT 240VAC, A SUITABLE ATTACHMENT PLUG SHOULD BE USED.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAYBE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

 
Applies only to Bluesound Powernode 2, Pulse 2 and Pulse Mini

An appliance with a protective earth terminal should be connected to a mains outlet with a protective earth connection.

Applies only to Bluesound Vault 2

Caution

This equipment employs a Laser System. To ensure proper use of this product, please read the complete owner's manual, available online at www.bluesound.com/support, and retain for future reference. Should the unit require maintenance, contact an authorized service location. Use of controls, adjustments or the performance of procedures other than those specified may result in exposure to laser radiation. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when the enclosure is opened.

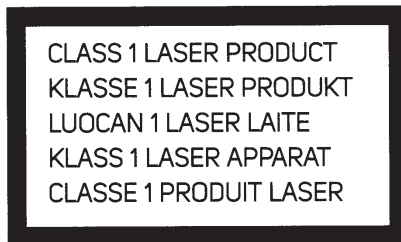

WARNING – DO NOT STARE INTO BEAM.

Applies only to Bluesound Node 2, Powernode 2, Pulse 2, Pulse Mini and Pulse Flex

European union notice for wireless product **CE0979**

Hereby, Lenbrook Industries Limited, declares that this Wireless Streaming Music Player/System is in compliance with the R&TTE Directive (1999/5/EC), Low Voltage Directive (2006/95/EC) and other essential requirements. The declaration of conformity may be consulted at www.lenbrook.com/DoC.

 
Notes on environmental protection



At the end of its useful life, this product must not be disposed of with regular household waste but must be returned to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, owner’s manual and packaging, point this out.

The materials can be reused in accordance with their markings. Through re-use, recycling of raw materials or other forms of recycling of old products, you are making an important contribution to the protection of our environment. Your local administrative office can advise you of the responsible waste disposal point.

Information about collection and disposal of waste batteries (directive 2006/66/EC of the european parliament and the council of European Union) (for European customers only)

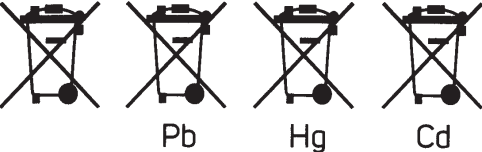

Batteries bearing any of these symbols indicate that they should be treated as “separate collection” and not as municipal waste. It is encouraged that necessary measures are implemented to maximize the separate collection of waste batteries and to minimize the disposal of batteries as mixed municipal waste.

End-users are exhorted not to dispose of waste batteries as unsorted municipal waste. In order to achieve a high level of recycling waste of batteries, discard waste batteries separately and properly through an accessible collection point in your vicinity. For more information about collection and recycling of waste batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

By ensuring compliance and conformance to proper disposal of waste batteries, potential hazardous effects on human health is prevented and the negative impact of batteries and waste batteries on the environment is minimized, thus contributing to the protection, preservation and quality improvement of the environment.

Record your model number (now, while you can see it)

The model and serial number are located on the back or bottom of the cabinet. For your future convenience, we suggest that you record these numbers here:

Model no.

Serial no.

Bluesound is a trademark of Bluesound International, a division of Lenbrook Industries Limited
© Bluesound International, a division of Lenbrook Industries Limited



BLUESOUND

WARRANTY

BLUESOUND INTERNATIONAL, a division of Lenbrook Industries Limited and its Authorized Distributors, warrants this component to be free from all defects in materials and workmanship as follows:

Electronic components and Electro-mechanical products:	One (1) year, parts & labor
Loudspeakers and subwoofer drivers:	Five (5) years
Powered speakers and subwoofers:	One (1) year

This warranty is valid only in the country of purchase. This warranty is non-transferable and is valid for the first original purchaser purchasing from an Authorized Bluesound Retailer or Dealer of products.

How to obtain service:

To obtain warranty service, go to the Bluesound Help Center at www.bluesound.com and click "Ask Us". You can also contact Bluesound at support@bluesound.com. A member of the Bluesound Support Crew will assist you. If you need assistance locating an authorized Bluesound Dealer, please check our Dealer locator at www.bluesound.com.

Note: The Bluesound warranty requires proof-of-purchase prior to any in-warranty repairs. Always retain your original sales slip.

What is covered:

All labor and material expenses for covered items, but you must pay any shipping charges if it is necessary to ship the product to Bluesound/Lenbrook or to an authorized Bluesound dealer or Distributor. If the repairs are covered by the warranty, Bluesound/Lenbrook, the dealer or distributor will pay the return shipping charges.

What is not covered:

This warranty does not cover a component which has been:

1. Damaged in transit or by act of God;
2. Overloaded, abused, misused, or operated with faulty or unsuitable equipment, or contrary to instructions contained in the accompanying product manual;
3. Serviced by unauthorized personnel;
4. The serial number has been altered or removed.

IN NO EVENT SHALL THE WARRANTOR BE LIABLE FOR INCIDENTAL, OR CONSEQUENTIAL DAMAGES, whether damages resulting from breach of express or implied warranties, tort, negligence, or otherwise.

Some states (provinces) or countries do not allow exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state (province) or between countries.

IMPORTANT: Warranty in some countries may vary. Contact Bluesound or your local distributor for details.

WARNING

DO NOT ENTRUST ANY REPAIR WORK TO UNAUTHORIZED PERSONS. THE COMPONENTS NECESSARY TO MAINTAIN THE ORIGINAL PERFORMANCE OF THIS PRODUCT ARE AVAILABLE ONLY THROUGH AUTHORIZED DEALERS AND DISTRIBUTORS. THE WARRANTY WILL BE INVALIDATED IF THE EQUIPMENT IS TAMPERED WITH OR INCORRECT PARTS ARE SUBSTITUTED.